



## Compatibility

- 864 TRV
- 864 HO with Ember-Fyre or Dancing-Fyre Burner Only

## Packing List

- Rear Fireback
- (2) Side Firebacks
- Fireback Floor (steel) – Used for 864 HO with Ember-Fyre Burner Only

### **Fireback Orientation – Each Side Has a Notch in the Upper Front Corner**

Make sure the firebacks are oriented as shown below (the grout lines and coloring will line up). The side firebacks have notches in the front upper corners. Arrange the firebacks before installing to verify alignment.



Note how these notches fit with the adjoining fireback.

### **Fireback Floor– Used on 864 HO with Ember-Fyre Burner Only**

The 864 HO is shipped without a burner or fireback floor. Follow the instructions included with the Ember-Fyre burner to install the firebox components. When the instructions call for installation of the firebacks, install the fireback floor directly on the base of the firebox. Then install the ledgestone firebacks on top of the fireback floor (see instructions on following pages).


### **Using the LedgeStone Firebacks with 864 HO and the Dancing-Fyre Burner Only**

The 864 HO is shipped without a burner or fireback floor. The Dancing-Fyre Burner includes steel firebacks (including the fireback floor). Follow the instructions included with the Dancing-Fyre burner to install the firebox components. When the instructions call for installation of the firebacks, install the fireback floor (either the one included with this kit or the burner) directly on the base of the firebox. The steel firebacks sides may be discarded. Then install the ledgestone firebacks on top of the fireback floor (see instructions on the following pages).




## Special Instructions for 864 TRV Fireplaces

Several of the firebox components will need to be removed before installing the firebacks. Remove the components shown below. Re-install these components after the firebacks are in place.

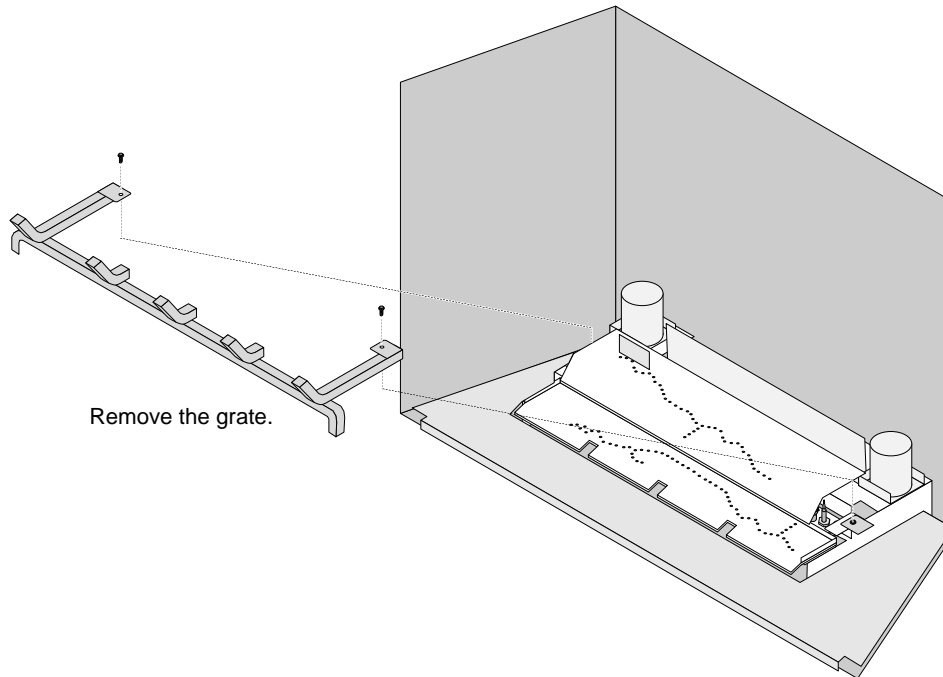

Remove the grate.

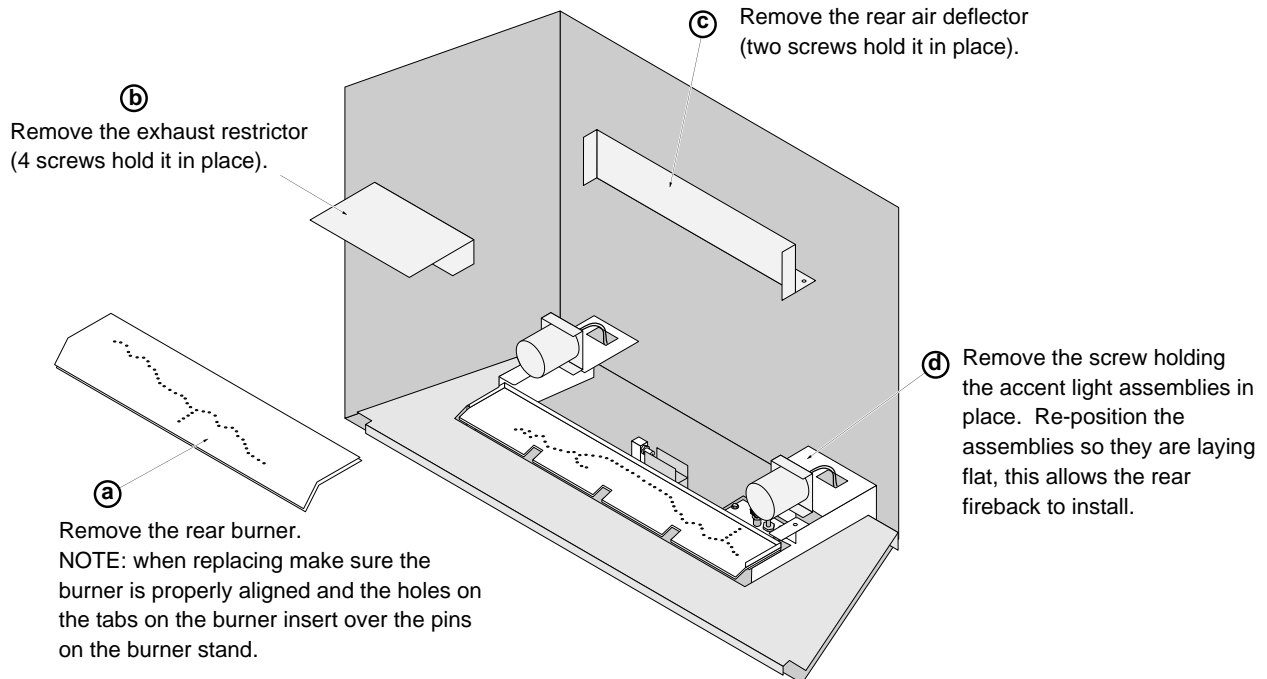



# 864 LedgeStone Fireback Installation


96100831

## Installation

**WARNING** Turn off gas to the appliance and make sure it has fully cooled prior to conducting service.

- 1 Remove the glass frame and logs (see the installation manual for details).
- 2 Install the firebacks following the directions below.

- a** Remove the clips located on the firebox ceiling near the front (both sides). These clips have keyhole slots that allow removal by loosening the screw and sliding the clip out.

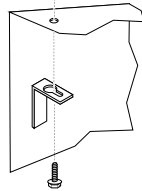

1/4" Nutdriver

**HINT:** Hold the firebacks at an angle and pivot them into place while installing.

**NOTE:**  
The firebacks install on top of the fireback floor.

Place the rear fireback in place. The side fireback holds the rear fireback in place - hold the rear fireback while installing the side fireback.

**b**

**c** Place the side firebacks in place.

**d** Replace the clips removed in step "a" to secure the side firebacks..

- 3 Restore the fireplace to the correct configuration.